



INSTRUCTION SHEET 5083344AA

BRAKE LAMP SWITCH

REMOVAL - BRAKE LAMP SWITCH

1. Remove column cover or knee bolster cover to access the brake lamp switch.
2. Rotate the switch counterclockwise about 30° and remove it from the bracket.


Note: Mini Van adjustable pedal equipped vehicles rotate clockwise.

3. Disconnect switch harness.


Note: Discard the old switch, it cannot be reused.

INSTALLATION - BRAKE LAMP SWITCH

1. The new switch must have the black adjustment lever on a 45° angle to the connector.

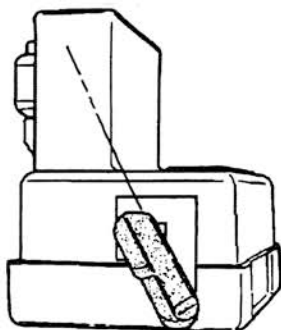

NEW SWITCH
Lever at 45° angle

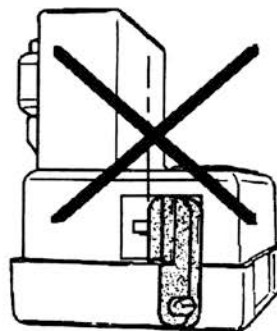

USED SWITCH
Lever parallel to the connector
SCRAP - DO NOT REUSE

Figure 1

CAUTION: The switch can only be adjusted once. If the switch is not adjusted properly or has been removed for some service, a new switch must be installed and adjusted. **DO NOT ATTEMPT TO RE-ADJUST THE BRAKE SWITCH.**

2. Connect the harness connector to the new switch (see Figure 2).
3. Align tabs on switch with notches in the Switch Bracket.

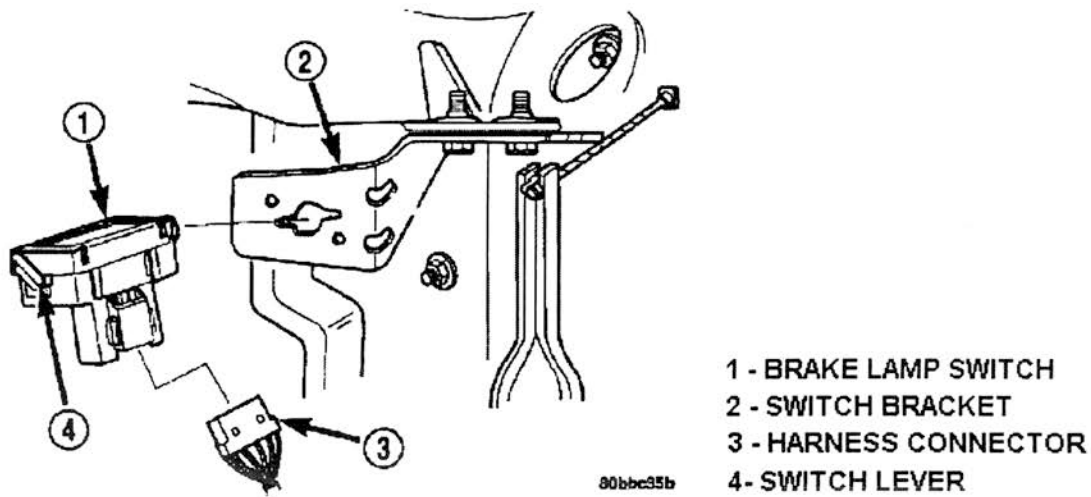


Figure 2

4. Insert the switch into the bracket and rotate it clockwise approximately 30°, to lock it into place. **Note: Mini Van adjustable pedal equipped vehicles rotate counterclockwise.** (Figure 2)

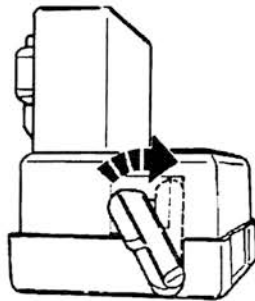


Figure 3

CAUTION: The switch can only be adjusted once.

5. Without touching the Brake Pedal, move the black adjustment lever clockwise to adjust the switch. The lever should be parallel to the connector. (Figure 3)
6. Switch is now properly adjusted.
7. Install the column cover or knee bolster cover.
8. Road test the vehicle to ensure proper operation of the brakes (including ABS and speed control if equipped).

NOTE: This procedure supercedes the service manual. Service manuals will be updated to agree with this procedure at the next opportunity, if necessary.