

8W-63 POWER SEATS

Component	Page
Circuit Breaker 2	8W-63-2, 3
Driver Heated Seat Cushion	8W-63-6, 8
Driver Heated Seat Switch	8W-63-5
Driver Lumbar Motor	8W-63-3
Driver Power Seat Front Vertical Motor ...	8W-63-2, 3
Driver Power Seat Horizontal Motor ...	8W-63-2, 3
Driver Power Seat Rear Vertical Motor ...	8W-63-2, 3
Driver Power Seat Switch	8W-63-2, 3
Fuse 1 (JB)	8W-63-5, 7
Fuse 2 (JB)	8W-63-5, 7
G201	8W-63-5, 7
G300	8W-63-3, 4, 6, 8
G301	8W-63-2

Component	Page
Heated Seat Relay	8W-63-5, 7
Joint Connector No. 5	8W-63-5, 7
Joint Connector No. 8	8W-63-5, 7
Junction Block	8W-63-2, 3, 5, 7
Passenger Heated Seat Cushion	8W-63-4, 6, 8
Passenger Heated Seat Switch	8W-63-7
Passenger Lumbar Motor	8W-63-4
Passenger Power Seat Front Vertical Motor.	8W-63-4
Passenger Power Seat Horizontal Motor ...	8W-63-4
Passenger Power Seat Rear Vertical Motor ...	8W-63-4
Passenger Power Seat Switch	8W-63-4
Seat Heat Interface Module	8W-63-5, 6, 7, 8







