

Locking Dust Cap for Dodge Ram Capless Diesels

To Install:



- Align the Secure Key over the screw head and slip it on.



- Turn the Secure Key counterclockwise about one revolution so that head of screw is above the locking groove of the top.



- Remove Secure Key.



- Rotate the top counter clockwise..



- Place unit above the fuel neck aligning the grooves with the tabs in the fillerneck.



- Slide the bottom into the filler neck.



- Rotate the top clockwise engaging the flange on the filler neck



- Reinstall the Secure Key on the head of the screw. Turn the Secure Key clockwise until the screw is lightly tight.

To Remove:




- Align the Secure Key over the screw head and slip it on.



- Turn the Secure Key counterclockwise about one revolution so that head of screw is above the locking pocket in the top.



- Rotate the top counter clockwise until it disengages the flange on the filler neck.

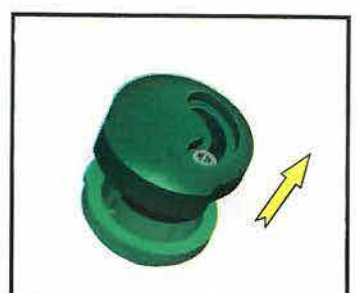

- Remove the cap from the filler neck.

Lightly tightening the Secure Screw is enough to ensure a secure system and an easy-to-unlock cap for the future. Only one revolution of the key to loosen the screw should be sufficient.