

Solenoid-Saver Diode Install

- Step 1. Remove stock trigger wire from starter.
- Step 2. Attach trigger wire to Diode.
- Step 3. Slide heat shrink sleeve protector and zip tie over the wire & diode.
- Step 4. Install Solenoid-Saver Diode on starter.
- Step 5. Slide tubing down to protect diode.
- Step 6. Heat shrink or zip-tie the heat-shrink protector tube.



www.genosgarage.com

Geno's Garage
1150 Samples Industrial Drive
Cumming, GA 30041

Tel: 770-886-2500
M-F 8:30AM - 5:30PM EST